Aluminum PC Case Installation Guide

Case components:

Door key is attach to the accessory box

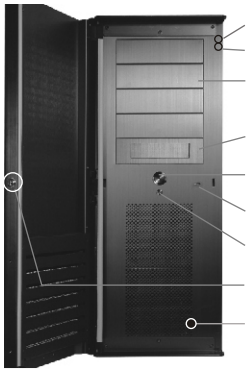

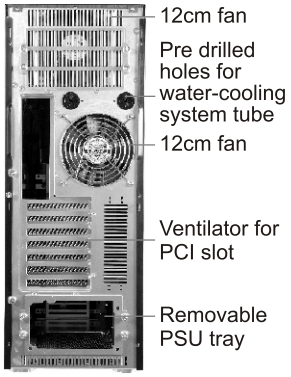

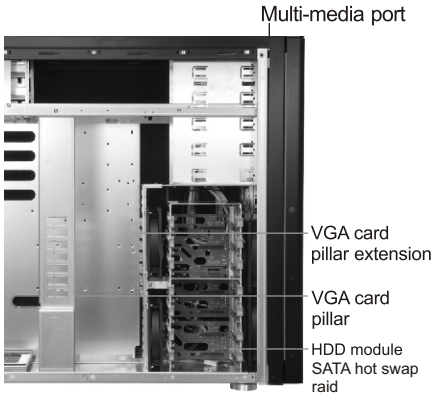

Guide to open left and right side panels

1. Remove four thumb screws.
2. Slide panel backward of the case.
3. Lift up the side panel.

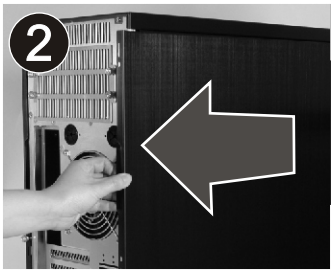

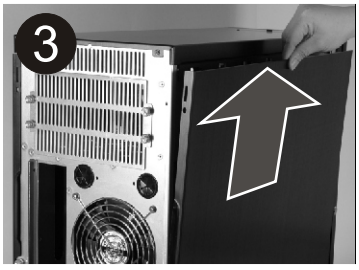

VGA card pillar extension

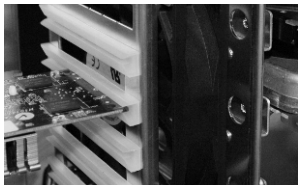

Support 12" inch long VGA card.

Movable/adjustable VGA card pillar extension suits for every type/brand of VGA card.

Remove mounting bracket

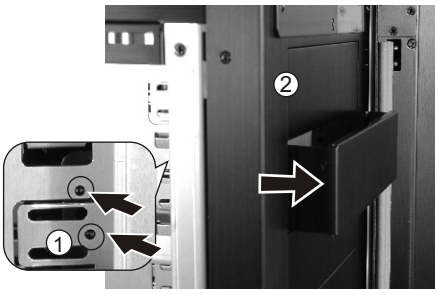

Push to release

Removable fan filter

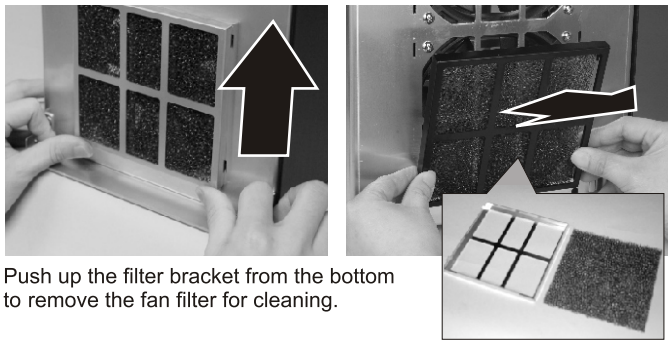

Push up the filter bracket from the bottom to remove the fan filter for cleaning.

Vents for water cooling

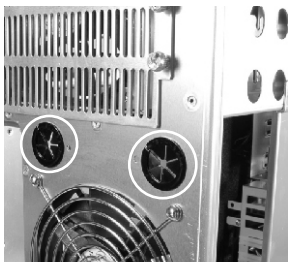

Remove the plastic slices for water tube openings.

Motherboard installation

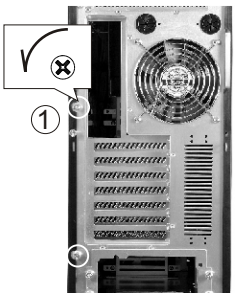

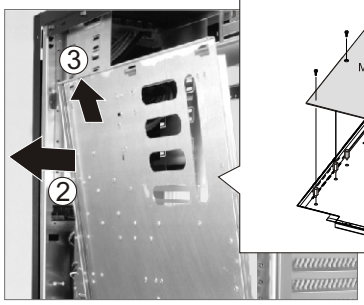

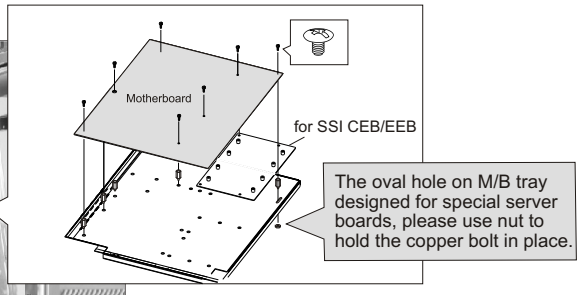
Motherboard
for SSI CEB/EEB
The oval hole on M/B tray designed for special server boards, please use nut to hold the copper bolt in place.

Loosing two thumb screws to release the M/B tray.

Secure the stand-off bolts on the M/B tray which match with the M/B fix points, place the M/B on the copper bolt, fasten the screws to secure.

3-speed fan adjustable device

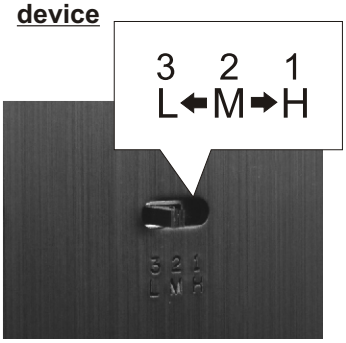

Hardware list

Screw(40) to fix drive & motherboard	Buzzer wire(1)	Thumb screw(14) & rubber ring(14) for fix HDD	Screw(12) to fix power supply
Copper bolt(16) for motherboard	Screw(30) for fix HDD		Clamp(1) to secure wire
Mounting bracket (1) for SSI CEB/EEB M/B	Thumb screw(3) for HDD extra fixing	Thumb screw(5) spare part	Thumb screw(7) for PCI card holder
Screw driver(1) to ass'y motherboard	Nut(3) to adjust copper bolt	Aluminum HDD rail(7)	
PCI card holder-S(3) PCI card holder-L(4)	Cable tie(3) for cable	PSU tray(1)	

* Extra quantities are spare parts.

Hard disk installation for SATA HDD cage

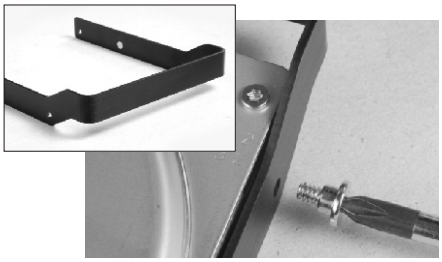

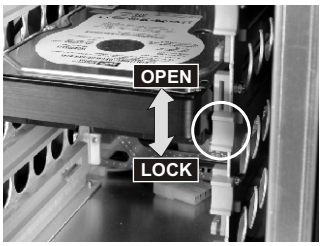

Hard disk installation for modularized HDD cage

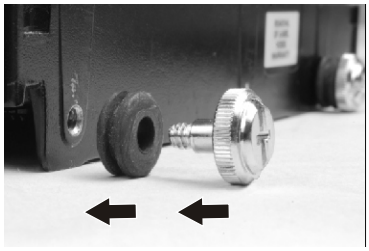

1. Fasten the HDD screws with anti-vibration rubber rings to the HDD.

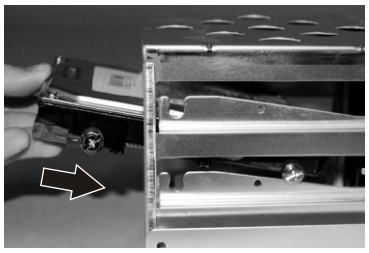

2. Slide the HDD into the HDD cage with the anti-vibration kit.

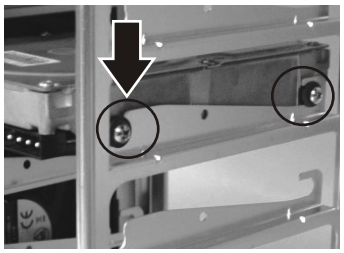

Press down the HDD into the slots to secure.

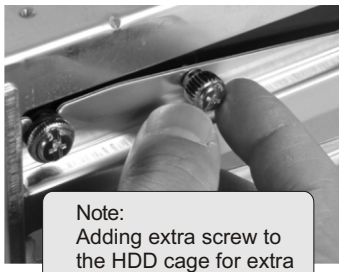

Note:
Adding extra screw to the HDD cage for extra security.

PSU installation

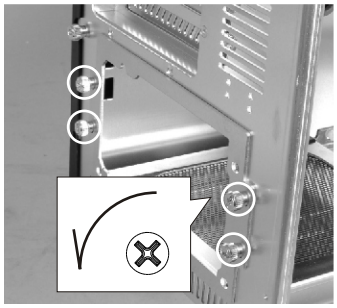

Loosing four thumb screws to remove the PSU tray

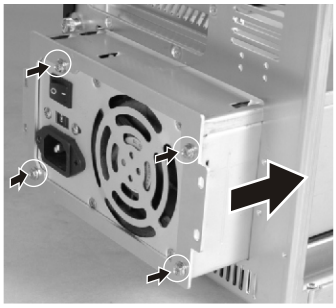

Assembling the power supply with PSU tray, and push in gently.

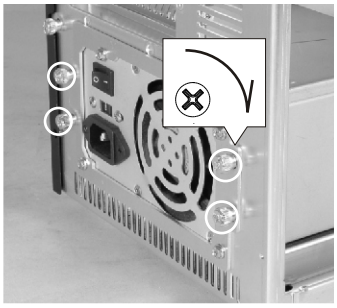

Tasten four thumb screws

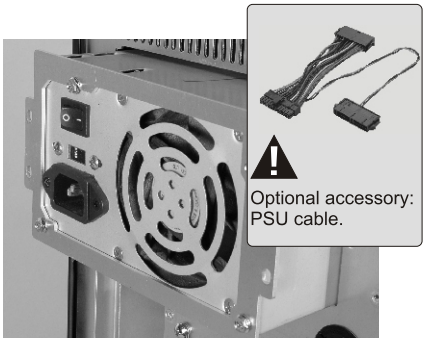

Can be place either upper or lower position.

Multi-Position HDD Module

Remove HDD module

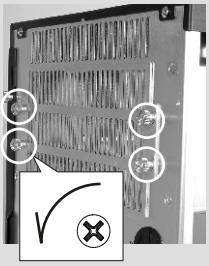

Loosing four thumb screws to remove the bracket

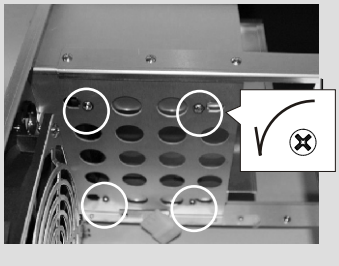

Loosing four screws remove the HDD module

To the bottom of the case

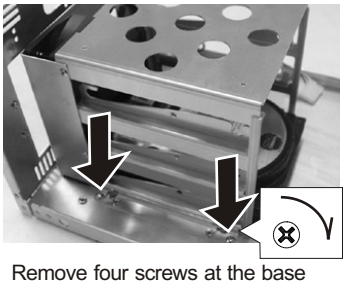

Remove four screws at the base of the case to release the PSU stand PSU stand before install the HDD module.

In the 5.25" rack

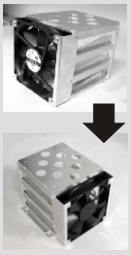

Change fan direction

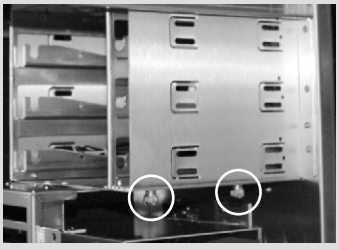

Also can fit on 5.25" rack tray

Removable top panel

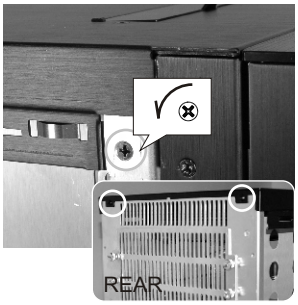

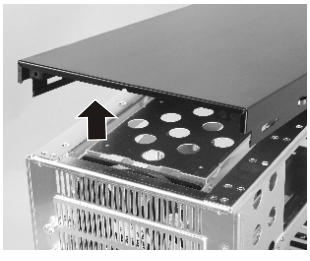

Loosing four screws to remove the top panel

Caution: Both side panels need to remove first in order to remove the top panel

VGA Card Pillar Installation Guide

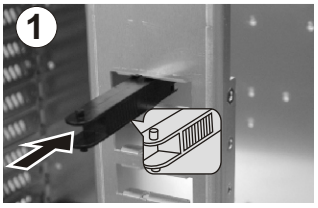

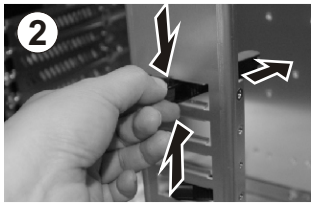

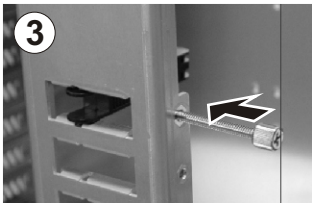

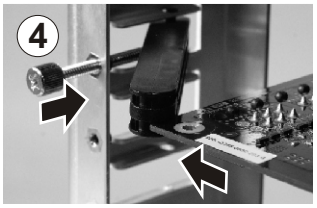

I/O Port installation

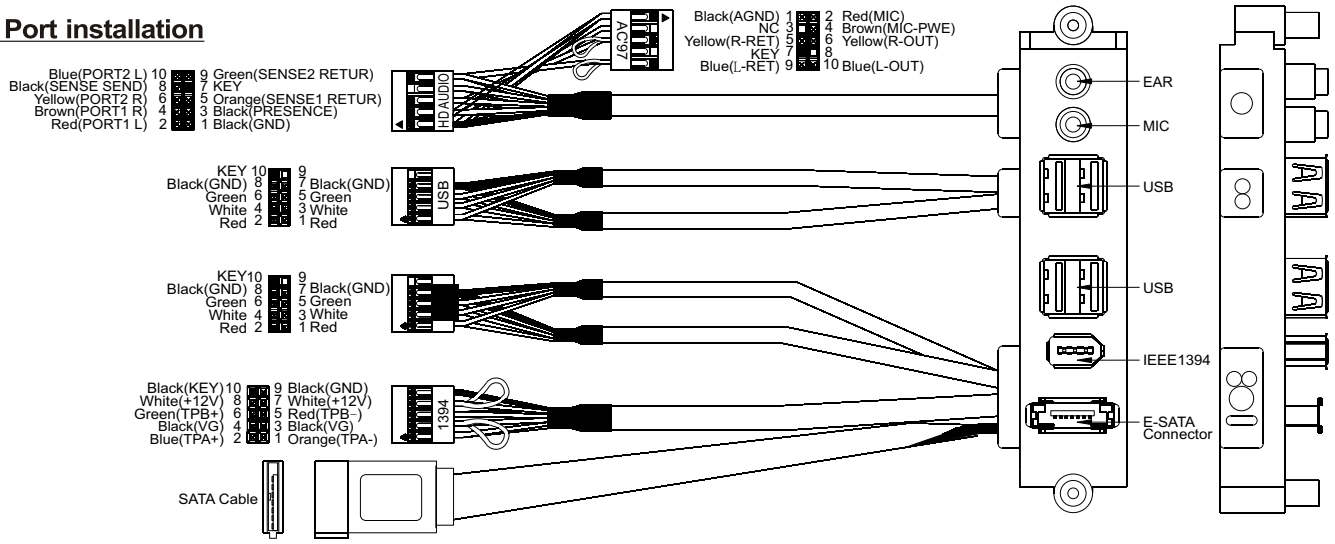

Adjustment for door swing direction

Loose the screws on the top panel plate as show in the image above.

Remove the door, and place the door on a table top.

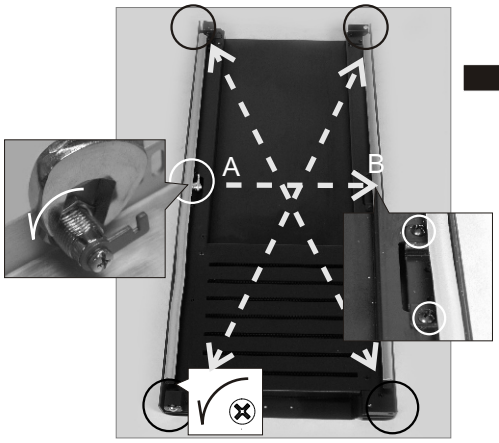

Swap the hinge and door stop as show as the image above

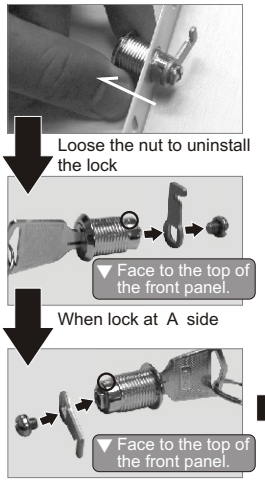

When lock at B side

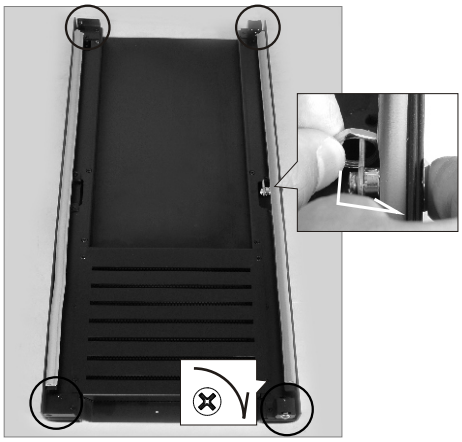

1. Secure all screws, and lock
2. Check the lock working mechanism swing the right direction

Reverse the step 2 and step 1 to secure the door panel.

Finish.

Optional kit

Thermometer

TR-3A TR-3B

USB 2.0 flash card reader / writer

Support multiple types of memory card

CR-36A CR-36B